



Flooring panels out of natural and untreated acacia wood with grid-back for interior and exterior zones



PLASTO-NATURE

Realwood flooring panels for wintergardens, terraces, lounges, saunas, cellars, campings, etc.




- ◆ surefooted ◆ barefoot friendly
- ◆ insulant against heat and cold
- ◆ water resistant ◆ non-slip surface ◆ recyclable ◆ UV-stabilized



PLASTO-NATURE – brings nature into your everyday life!



Products with a 100% FSC label come from forests certified as meeting the environmental and social standards of the Forest Stewardship Council A.C. – FSC Trademark © 1996

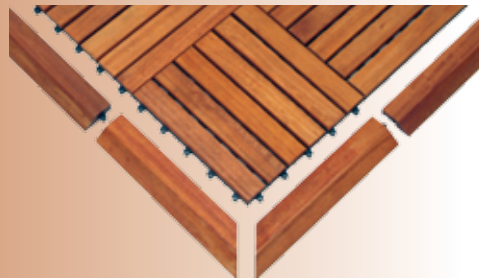

Easy to install, long-lasting and environmentally friendly. The acacia wood panels have a grid-back, which assures flexibility and adjustment to each ground.

Material	Acacia with grid-back of Polypropylen PP
Size	30 x 30 x 2,3 cm left- and right pieces
Stability	-20° to +65° C
Pressure	up to 20 tons per m ²
Surface	natural an untreated – grinded wood
FSC	SQS certified 23846
Panels per m ²	11 panels
Edgeprofiles	30 x 7 cm left- and right pieces
Cornerpieces	37 x 7 cm left- and right pieces



Rte de l'Aérodrome 243
 CH-1730 Ecuwillens
 Telefon +41 (0) 26 411 95 95
 Telefax +41 (0) 26 411 95 99
 www.plastoform.ch

PLASTO-NATURE flooring panels installation guide

Floor

Real wood flooring panels require a stable and level floor such as asphalt, concrete, concrete stones, tiles or cement grouting.

Assembly

The assembly of the flooring panel elements is carried out by means of plastics hooks placed under the gratings. Assembly and disassembly are therefore extremely simple and require no tools. The real wood flooring panels are split in left and right gratings. To make assembly easier, make sure that the outside plastic knobs always look in the same direction.

Cutting

Real wood flooring panels can be cut to fit any shape. The wood laths are screwed to the plastic grid from underneath. The screws may be displaced or added to follow the cutting line. **When using an electric power tool for cutting, always wear safety glasses and protective clothing.**

Assembly examples:



Left grating



Right grating

PLASTO-NATURE

Robust and Portable, quick Install, easy Clean, flexibility Design, Multiples Uses, Swiss Manufacture, Engineering and Design.

Edge parts

Never fix the real wood flooring panels directly onto the floor, which should be able to move according to changes in the weather. Keep a minimum clearance of 10 to 15 mm from the walls, door sills and other fixed building elements.

Care/Maintenance

Real wood flooring panels are easy to clean. A vacuum cleaner and a moist cloth with or without soap for wooden floors will do the job. To protect the grating and maintain its original tint, regular painting with pigmented oils or teak oil is advised. Tint and structure differences of the wood are nothing uncommon. Meteorological conditions can lead to fine shakes which do not influence the durability of the wood.

Special remark

When exposed to severe, enduring humidity, the wood laths can be subject to buckling. Once they have dried out, the laths will, however return to their original shape.

Chequerboard pattern:



Left grating

Right grating

Straight pattern:




Left grating

Right grating

This is how PLASTO-NATURE is intalled:

1. Measure the complete surface to be covered
2. Calculate the overall surface into section of 30 x 30 cm.
3. Count the number of panels at the outer edge of the surface = quantity of Edge profiles required
4. Do not forget the corner pieces!

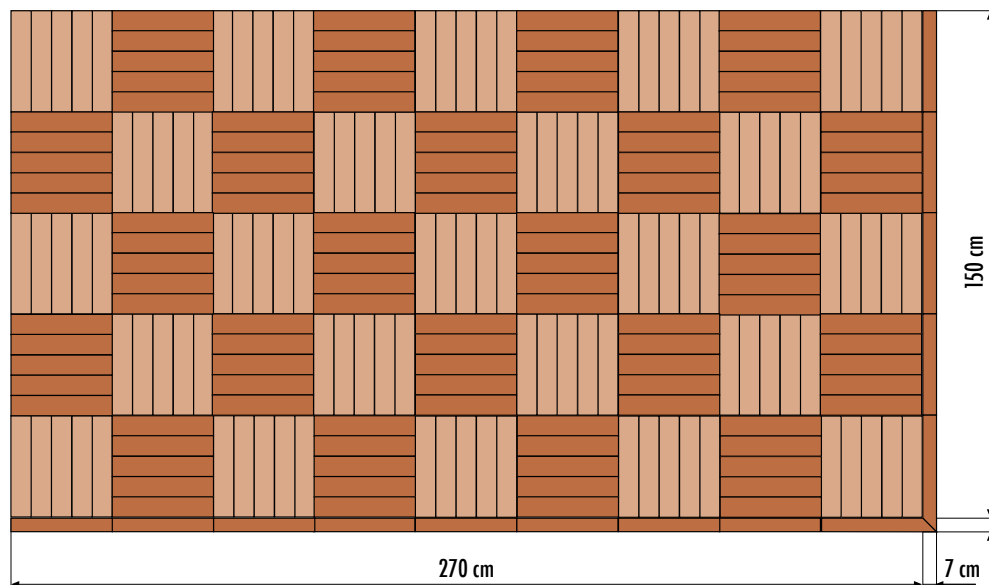

Straight pattern:



Left grating

Right grating

Straight pattern:



Left grating

Right grating